



Grafica™

Graphic LCD Keypad

User's Quick Reference Guide

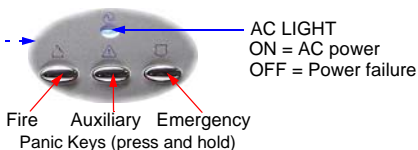

AC LIGHT
ON = AC power
OFF = Power failure

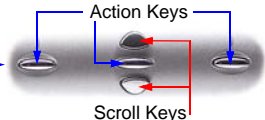

Use the **Action Keys** to select an option shown above the Action Key on the screen.

Navigate the User Menu with the **Scroll Keys**.

How To Use Grafica

Method 1: Using Your Code

- 1) From the System Status screen, enter your **code #** (PIN).
- 2) Use the Scroll Keys to navigate the User Menu* and highlight an option.
- 3) Press the center action key (**OK**).
- 4) Follow the on-screen instructions.

Method 2: Using One-Touch Options













- 1) From the System Status screen, press the right action key (**Menu**).
- 2) Use the Scroll Keys to navigate the User Menu* and highlight an option.
- 3) Press the center action key (**OK**) to enable the option.

One-Touch Options must be enabled on all displayed partitions otherwise you will be prompted to enter your **code #** (PIN).

**The User Menu options may vary according to your user profile.*



To reset a smoke detector after an alarm, press and hold the [*****] and [**#**] keys for two seconds.

- Arm System:**  Arms entire area when all zones are closed.
- Disarm:**  Disarms entire area.
- Stay Arm:**  Arms area's perimeter only, which allows you to remain in the protected area.
- Force Arm:**  Arms entire area without waiting for all zones to close.
- Instant Arm:**  Same as **Stay** arming, except that an alarm occurs instantly if any armed zones are opened, including entry delay zones.
- Alarm Memory:**  Displays a record of recently triggered alarms.
- Trouble:**  Displays a list of system troubles.
- Bypass:**  Deactivates specific zones the next time the system is armed.
- View Status:**  View floor plans and the status of zones, events and areas.
- Programming:**  Program user codes, user profiles, timed auto-arming and send test reports.
- Alarm Clock:**  Set the alarm clock.
- Keypad Settings:**  Set the system tones, LCD contrast, backlight and more.

Some of the features mentioned in this guide need to be activated by your installer. We recommend that you test your system on a weekly basis. Please refer to the appropriate user manual.

© 2002-2003 Paradox Security Systems Ltd.

Grafica is a trademark of Paradox Security Systems Ltd, or its affiliates in Canada, the United States and/ or other countries. All rights reserved.

