

MAGELLAN™


MG321 - User's Quick Reference Guide

KEYPAD OVERVIEW


AC Light (yellow)
 On* = Power on
 Off = Power off

StayD Light (green)
 On* = StayD on
 Off = StayD off

* Icon shown on screen

 = Press once + [MASTER CODE] for Quick Menu Programming

Zone Display:
 The numbers [1] to [32] correspond to zones 1 to 32 respectively. Open or entry delay zones are illuminated, and flash in alarm.

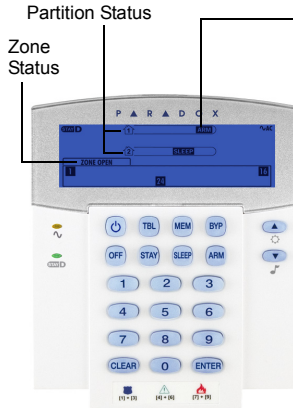

Arm / Sleep / Stay:
 On = Partition armed
 Off = Partition disarmed
 Flash = Exit Delay
 Fast Flash† = Exit Delay (final 10 sec.)
 Fast Flash† = Partition in alarm

†Audible Indicators:
 Continuous beep = Alarm
 Variable beep = Fire alarm
 Intermittent beep = Beginning of exit delay
 Fast beep = Final 10 sec. of exit delay

[TBL] Trouble display
 On = Trouble(s) occurring

[MEM] Alarm memory display
 On = Alarm(s) occurred

[BYP] Bypass programming
 On = Zone(s) bypassed

ARMING AND DISARMING

**TO ARM
 WHEN LEAVING...**



**TO ARM
 WHEN STAYING...**



To Regular Arm:

1. Close all zones in the desired partition.
2. Enter your [ACCESS CODE]‡ or [ARM] + [ACCESS CODE]

To Stay Arm:

1. Press the [STAY] key.
2. Enter your [ACCESS CODE]‡.

To Sleep Arm:

1. Press the [SLEEP] key.
2. Enter your [ACCESS CODE]‡.

To Disarm:
 [OFF] + [ACCESS CODE]‡

‡ If needed, press button(s) corresponding to desired partition(s). For two partitions, press the other key after the confirmation beep.

PANIC ALARMS

To send a silent or audible alarm to your monitoring station, press and hold one of the button combinations listed for 3 seconds.

Panic Alarm Type	Button Combinations
Police	Press [1] & [3]
Medical	Press [4] & [6]
Fire	Press [7] & [9]

TROUBLE DISPLAY

1. Press the **[TBL]** key. The word 'Trouble' and the number(s) corresponding to the trouble(s) will be displayed on the screen.
2. Read the corresponding explanation of the trouble from the trouble list in the MG/SP User Guide. If no repair instructions are given, call your security company for repairs.
3. Press the **[CLEAR]** key to exit.

BYPASS PROGRAMMING

Bypassed zones remained unarmed when the partition is armed.

1. Press the **[BYP]** key.
2. Enter your **[ACCESS CODE]**.
3. The corresponding zone number will be displayed on the screen when open. Select the zone(s) you want to bypass by entering the two-digit zone number. For example to enter zone 3 enter **[0]** then **[3]**. The corresponding zone indicator will flash.
4. Press the **[ENTER]** key to save and exit.

ALARM MEMORY DISPLAY

To view the alarms that occurred during the last armed period:

1. Disarm the system.
2. Press the **[MEM]** key.
3. The corresponding zone numbers that were in alarm the last time the system was armed will appear on the screen.
4. Press the **[CLEAR]** key to exit.

KEYPAD SETTINGS

To mute the keypad:

Press and hold the **[CLEAR]** key for 6 seconds to enable or disable Keypad Muting.

To modify the backlight:

1. Press and hold the **[▲]** key for 4 seconds.
2. Keys 1, 2, 3, 5 and 6 will flash.
3. Press [2], then use the **[▲]** and **[▼]** to adjust.
4. Press **[CLEAR]** or **[ENTER]** to exit.

CHIME PROGRAMMING

A Chime Enabled zone will advise you every time it is opened by causing your keypad to beep.

1. Press & hold the **[♪]** key. The word 'Chime' will appear on the screen.
2. Select the zones you want to Chime by entering the two-digit zone number. The corresponding zone number will flash. For example, to chime zone 2 enter **[0]** then **[2]**. The keypad will automatically save once the 2-digit zone number is entered.
3. Press the **[ENTER]** key to exit.

© Paradox Security Systems Ltd., 2005-2007. Magellan is a trademark or registered trademark of Paradox Security Systems Ltd. and its affiliates in Canada, the United States and/or other countries. All rights reserved.

P  **R**  **D** **O** **X**[®]
S E C U R I T Y S Y S T E M S

paradox.com

Printed in Canada 10/2007

MG321-EQ00